

END FITTINGS for STAINLESS STEEL EXPANSION JOINTS


Loose Flanges/ Van Stone

Advantages:

- Flanges not in contact with medium
- Possible connection of non-weldable materials
- Lower costs compared to fixed flanges
- No circumferential welding seams
- Permits galvanisation/coating of flanges

Disadvantages:

- Only loose sleeve possible
- Not suitable for high pressure

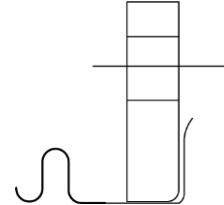


Loose flanges/ Stub end

Advantages:

- Flanges not in contact with medium
- Possible connection of non-weldable materials
- Permits galvanisation/coating of flanges
- Fixed sleeve possible

Disadvantages:

- More costly than Van Stone flanges

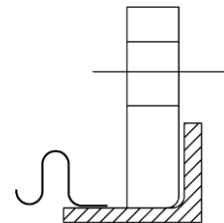


Loose Flanges/ Welded Ring

Advantages:

- Flanges not in contact with medium
- Possible connection of non-weldable materials
- Permits galvanisation/coating of flanges
- Fixed sleeve possible

Disadvantages:

- More costly than Van Stone flanges

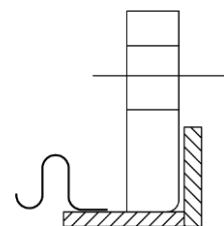

All information in this document is without any obligation, specifications subject to change without any notice.

Amniflex B.V.

Abraham van Stolkweg 118
3041 JA, Rotterdam
T: +31(0)10 2982121
E: amniflex@plastiflex.com
www.amniflex.com

BTW nr. NL862140729B01
Bank: KBC Bank NV
KREDNL2XXXX
IBAN NL23 KRED0633024376

K.v.K. Rotterdam nr. 81568053

Al onze aanbiedingen en leveranties geschieden
volgens onze algemene leveringsvoorwaarden.




Welding Ends

Advantages:

- Simple
- Low costs

Disadvantages:

- Requires on site welding and inspection




Fixed Flanges

Advantages:

- Easy to replace

Disadvantages:

- Flanges in contact with medium
- Relatively high costs

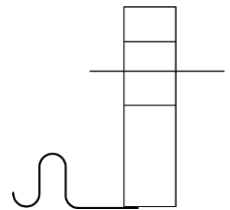

All information in this document is without any obligation, specifications subject to change without any notice.

Amniflex B.V.

Abraham van Stolkweg 118
3041 JA, Rotterdam
T: +31(0)10 2982121
E: amniflex@plastiflex.com
www.amniflex.com

BTW nr. NL862140729B01
Bank: KBC Bank NV
KREDNL2XXXX
IBAN NL23 KRED0633024376

K.v.K. Rotterdam nr. 81568053

Al onze aanbiedingen en leveranties geschieden
volgens onze algemene leveringsvoorwaarden.



SLEEVES / LINERS for STAINLESS STEEL EXPANSION JOINTS

Single Sleeve

Advantages:

- Protection of bellows
- Weep holes possible



Disadvantages:

- Reduction of flow diameter

Double Sleeve

Advantages:

- Optimum protection of bellows




Disadvantages:

- Reduction of flow diameter
- More costly than single sleeve

Loose Sleeve

Advantages:

- Protection of bellows
- Enable inspection of bellows interior

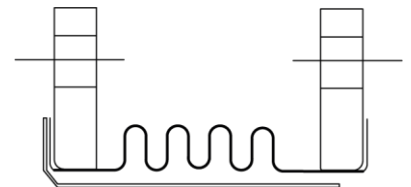

Disadvantages:

- More costly than fixed sleeve

All information in this document is without any obligation, specifications subject to change without any notice.

Amniflex B.V.

Abraham van Stolkweg 118
3041 JA, Rotterdam
T: +31(0)10 2982121
E: amniflex@plastiflex.com
www.amniflex.com

BTW nr. NL862140729B01
Bank: KBC Bank NV
KREDNL2XXXX
IBAN NL23 KRED0633024376

K.v.K. Rotterdam nr. 81568053

Al onze aanbiedingen en leveranties geschieden
volgens onze algemene leveringsvoorwaarden.

