

Stainless steel expansion joint, type AX (custom made)

Applications:

Axial expansion joints from Amniflex are available in type's AX1S, with welding ends, AX1F with plate flanges and AX1H with welding neck flanges.

Our standard axial expansion joints are to be installed with only one expansion joint between each fixed point. Pipeline systems where axial expansion joints are used must be protected against sideways bending. By fitting guides, sideways bending is not possible.



Axial expansion joints from Amniflex


- only designed to absorb movements in axial direction
- is not to be exposed to torsion
- only one axial expansion joint between every two fixed points
- design pressure: for standard type's: PN6, PN10, PN16 and PN25

Fixed points


The pipeline, in which the expansion joint is mounted, must be fixed by fixed points which are strong enough to absorb the reaction forces produced by:

- the inside pressure (the product of the effective bellows cross-section, mm²)
- the operating pressure (bar)
- the inherent resistance of the expansion joint (spring rate N/mm) x expansion (mm)


All stainless steel expansion joints, type AX1S, type AX1F and AX1H are tailor made and thus all materials and/or welding ends, floating/fixed flanges, plate flanges, welding neck flanges etc. are upon request.

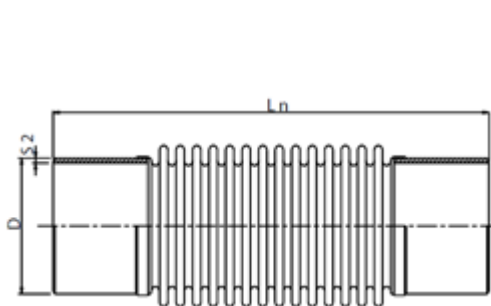

Type: AX1S

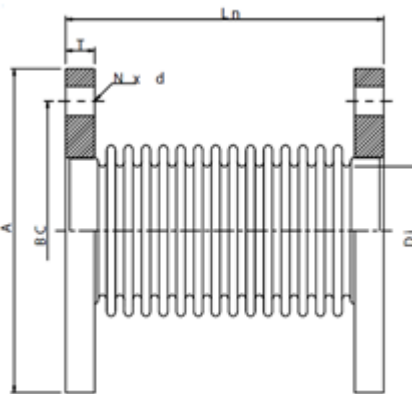

Type: AX1F

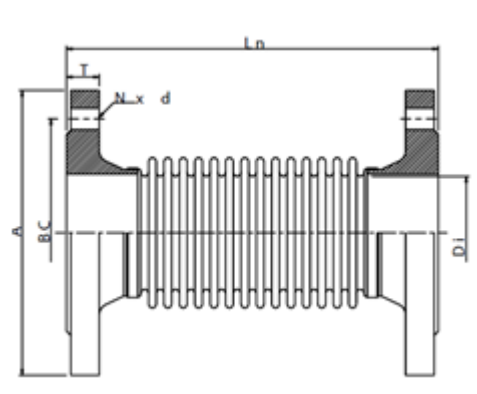

Type: AX1H

All information in this document is without any obligation, specifications subject to change without any notice.

Amniflex B.V.

Abraham van Stolkweg 118
3041 JA, Rotterdam
T: +31(0)10 2982121
E: amniflex@plastiflex.com
www.amniflex.com

BTW nr. NL862140729B01
Bank: KBC Bank NV
KREDNL2XXXX
IBAN NL23 KRED0633024376

K.v.K. Rotterdam nr. 81568053

Al onze aanbiedingen en leveranties geschieden volgens onze algemene leveringsvoorwaarden.

